

👁 Note!

Please note that there can be small differences between your product and the images in these instructions.

👁 Note!

Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.

Cancellation kit, BMW M3/M4 G80/G82

35020-33

Mounting Instructions

MOUNTING INSTRUCTIONS


Front axle:

1



Open the connector lock. Remove the Standard wire out of the connector. Use a correct tool.

2

Insert the completed wire with sealings into the supplied connector until to the lock. The pinposition / cable colour is not relevant. After this lock the connector.

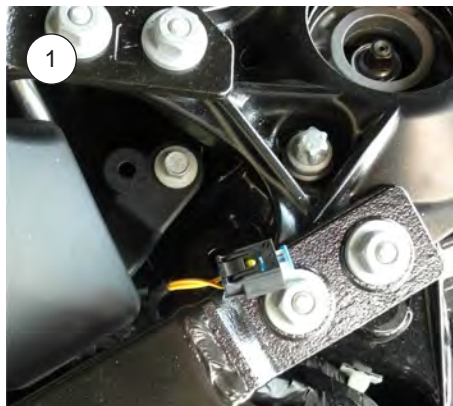

Connector lock

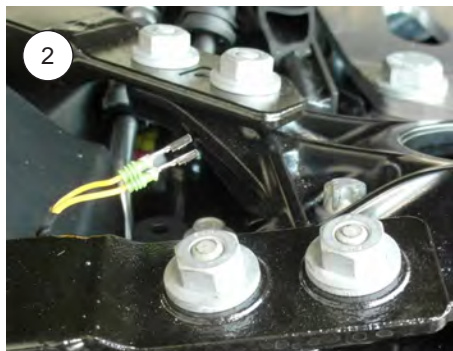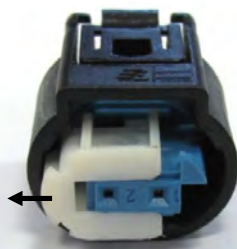

MOUNTING INSTRUCTIONS

3

Run the standard damper control wire to the supplied electronic component connector.

Insert the standard connector into the electronic component connector until it locks.

Fix the canceller and the wire with cable ties / edge clips on the chassis edge.



MOUNTING INSTRUCTIONS

Rear axle right:

1

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the canceller with supplied cable ties on the wire harness. Then attach the wire and the connector with cable ties on the wire harness.



MOUNTING INSTRUCTIONS

2


Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the canceller with supplied cable ties on the wire harness. Then attach the wire and the connector with cable ties on the wire harness.



MOUNTING INSTRUCTIONS

3

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the canceller with supplied cable ties on the wire harness. Then attach the wire and the connector with cable ties on the wire harness.

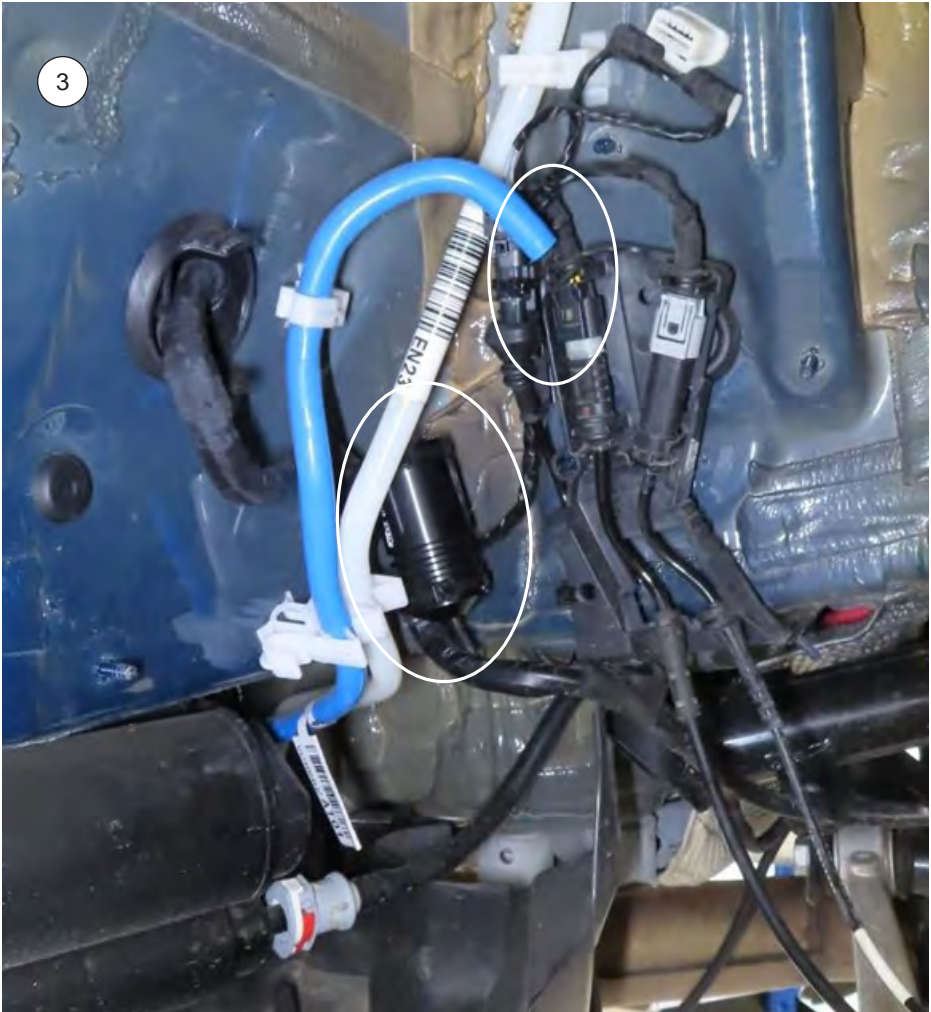

MOUNTING INSTRUCTIONS

4

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the canceller with cable ties on the vehicle chassis.



Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_35020-33_0
Issued 2022-10-21

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com